

AKR 906

D INSTALLATIONSANGABEN

Mindestabstand über der Kochfläche: 65 cm (Elektrokochplatten), 75 cm (Gas-, Öl- oder Kohlekochplatten). Schreiben die Installationsanweisungen des Gaskochfelds einen größeren Abstand vor, ist dieser natürlich zu beachten. Folgen Sie bei der Installation der Nummerierung (1⇒2⇒3⇒.....). Schließen Sie das Gerät erst nach seiner kompletten Installation an das Stromnetz an. Achtung! Das Auslassrohr und die Befestigungsmanschetten sind nicht im Lieferumfang inbegriffen und müssen gesondert erworben werden.

Die mit der Dunstabzugshaube gelieferten Dübel eignen sich für fast alle Decken. Trotzdem muss eine Fachkraft befragt werden, um sicherzustellen, dass die Materialien für die jeweilige Deckenqualität geeignet sind. Die Decke muss in der Lage sein, das Gewicht der Dunstabzugshaube zu tragen.

GB INSTALLATION SHEET

Minimum height above cooker: 65 cm (electric cookers), 75 cm (gas, gas oil or coal cookers). If the installation instructions for a gas cooker specify a greater distance, then this distance must be observed. To install, follow steps (1⇒2⇒3⇒.....). Do not connect the hood to the electrical power supply until installation is completed. Warning! The exhaust pipe and clamps are not supplied and must be bought separately.

Expansion plugs are provided to secure the hood to most types of ceilings. A qualified technician is needed, however, to make sure that the plugs are suitable for your ceiling. The ceiling must be strong enough to take the weight of the hood.

F FICHE D'INSTALLATION

Distance minimale par rapport à la cuisinière : 65 cm (cuisinière électrique), 75 cm (cuisinière à gaz, mazout ou charbon. Si les instructions d'installation du dispositif de cuisson à gaz indiquent une distance supérieure il est nécessaire de la respecter. Pour le montage, suivez la numérotation (1⇒2⇒3⇒.....). Ne branchez pas l'appareil tant que l'installation n'est pas terminée. Attention ! Le conduit d'évacuation et les colliers de fixation ne sont pas fournis et doivent être achetés à part.

La hotte est équipée de chevilles de fixation convenant à la plupart des plafonds. Il est cependant nécessaire de s'adresser à un technicien qualifié afin de s'assurer que le matériel est approprié au type de plafond. Le plafond doit être suffisamment solide pour supporter le poids de la hotte.


NL INSTALLATIEKAART

Minimumafstand tot het kooktoestel: 65 cm (elektrische kooktoestellen), 75 cm (kooktoestellen op gas, olie of kolen). Als de installatie-instructies van het kooktoestel op gas een grotere afstand aangeven, moet hiermee rekening gehouden worden. Volg voor de montage de nummering (1⇒2⇒3⇒.....). Geef het apparaat geen stroom totdat de installatie geheel voltooid is. Let op! De afvoerbuis en de klembanden worden niet bijgeleverd en moeten apart worden aangeschaft.


De wasemkap is voorzien van bevestigingspluggen die geschikt zijn voor de meeste plafonds. Er moet echter contact opgenomen worden met een gekwalificeerd technicus, om u ervan te vergewissen dat de materialen geschikt zijn voor het type plafond. Het plafond moet stevig genoeg zijn om het gewicht van de kap te houden.



AKR 906

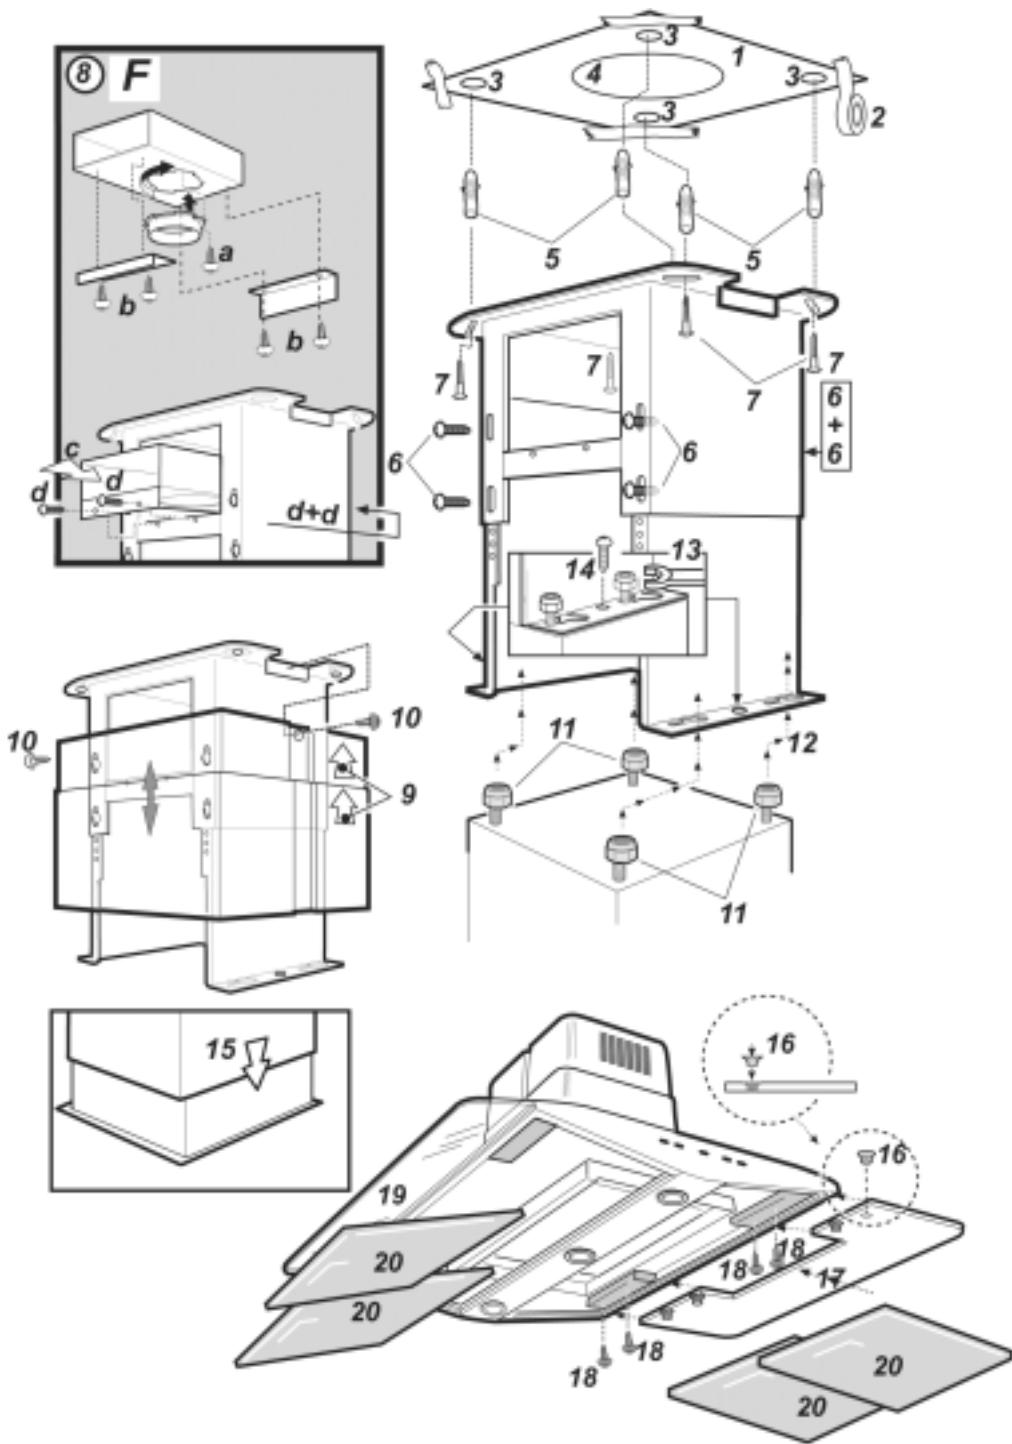

AKR 906

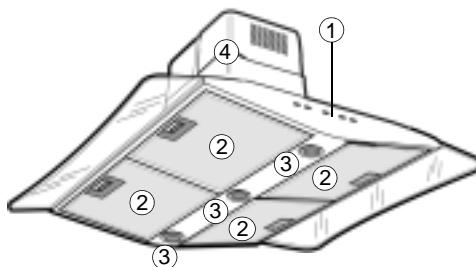

1. Control panel.
2. Grease filters.
3. Lighting unit (halogen bulb).
4. Telescopic flue.

To clean the grease filter

Wash the grease filter once a month, or whenever the grease filter saturation indicator flashes (Extraction speed indicator 2).

1. Disconnect the electrical power supply.
2. Remove the grease filters:
 - a - push the handles towards the lighting unit
 - b - and then downwards.
3. After washing the metal grease filter, remount in reverse order ensuring that the entire extraction surface is covered.

Replacing bulbs

1. Disconnect the electrical power supply.
2. Unscrew the lighting unit.
3. Remove the burnt-out bulb.
Use 20 W max halogen bulbs only.
4. Screw the lighting unit back in place.

Fitting or renewing the carbon filter

1. Disconnect the electrical power supply.
2. Remove the grease filters (a, b).
3. Fit the carbon filter, using the two buttons to fix it (c).
4. If the carbon filter needs renewing, remove the old filter and fit a new one.
Change the carbon filter at least once a year and, in any event, every time the carbon filter saturation indicator flashes (Extraction power indicator 3).
5. Refit the grease filters.

Reset filter indicator: press the extraction OFF button until LED 2 and/or LED 3 stop flashing.



DIGITAL CONTROL PANEL



1. Extraction OFF button.
2. Extraction ON
1 \Rightarrow 3 \Rightarrow 1 ...
3. Extraction speed indicator 1.
4. Extraction speed indicator 2 and grease filter saturation indicator (when flashing).
5. Extraction speed indicator 3 and carbon filter saturation indicator (when flashing). This indicator is usually deactivated: In order to activate it press buttons 2 and 7 at the same time until the carbon filter saturation indicator starts flashing; to deactivate the function repeat the operation.
6. **Intensive** extraction speed indicator.
7. Timed intensive speed button: the hood operates at this speed for 5 minutes and then returns to the previous settings.
This function can be cancelled by pressing button 1 or 2.
8. Light OFF button.
9. Light ON button.

CONTROL PANEL WITH BUTTONS

Light  :

Press the button to switch on.

Extraction speed  :

Press the next button to increase extraction speed.

